

6. At the end of the charging period, you may continue to use your HP-65 with ac power or proceed to the next step for battery-only operation.
7. With the power switch set to OFF, disconnect the battery charger from both the power receptable and the HP-65.


CAUTION

The use of a charger other than the HP 82002A Battery Charger (or the equivalent number for operation outside the U.S.) may result in damage to your calculator.

Maintenance**Battery Pack Replacement**

To replace your battery pack use the following procedure:

1. Set the power switch to OFF and disconnect the battery charger.
2. Slide the two battery-door latches toward the bottom of the calculator.

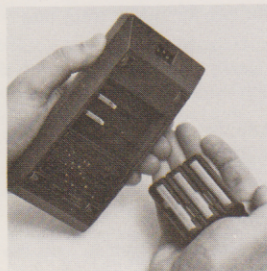

3. Let the battery door and battery pack fall into the palm of your hand.



4. See if the battery connector springs have been inadvertently flattened inward. If so, bend them out and try the battery again.



6. Insert the top of the battery door behind the retaining groove and close the door.



5. Insert the new battery pack so that its contacts face the calculator and contact is made with the battery connectors.

